


YT-09000

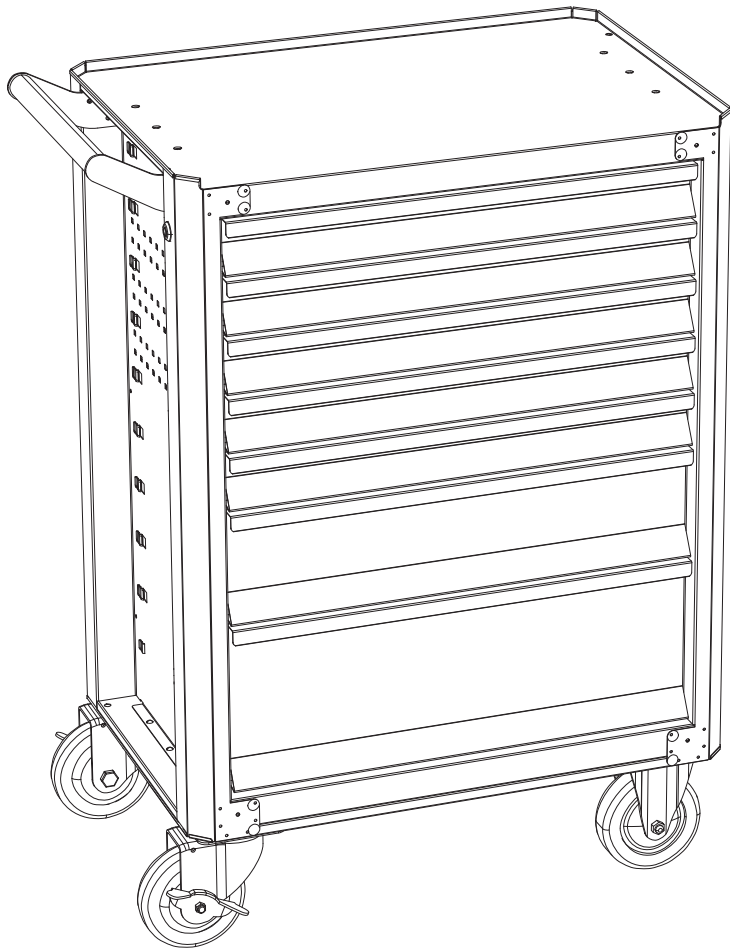

PL SZAFKA WARSZTATOWA
GB ROLLER CABINET



GB


CAUTION!

Before assembling the product, please read the manual and check if all parts are present, if anything missing, please contact your customer service for replacement.

The metal may has sharp corners or edges, the use of protective gloves is recommended.

It is recommended that this product be assembled on a clean, soft surface.

PACKAGE CONTENTS

PART	GRAPHIC	DESCRIPTION	QUANTITY
A		Fixed wheels	2
B		Brake wheels	2
C		Screws for wheel, M8 x 20	16
D		Washers for wheels	16
E		Hex key 6 mm	1
F		Metal handle	1
G		Screws for handle, M6 x 20	4



UWAGA!

Przed rozpoczęciem montażu, proszę przeczytać instrukcję i sprawdzić czy wszystkie wymienione części znajdują się w opakowaniu. W przypadku stwierdzenia braków należy skontaktować się ze sprzedawcą.

Podczas montażu zalecane jest stosowanie rękawic ochronnych, ponieważ metalowe części mogą mieć ostre krawędzie.

Zalecane jest dokonanie montażu na czystej, miękkiej powierzchni.

ZAWARTOŚĆ OPAKOWANIA

CZĘŚĆ	WYGLĄD	OPIS	ILOŚĆ
A		Koła nieobrotowe	2
B		Koła hamulcowe	2
C		Śruby do kół, M8 x 20	16
D		Podkładki śrub do kół	16
E		Klucz imbusowy 6 mm	1
F		Uchwyt szafki	1
G		Śruby do uchwytu, M6 x 20	4





INSTRUKCJA MONTAŻU

Odwrócić szafkę i postawić ją na miękkiej powierzchni jak dywan lub karton. Pozwoli to zapobiec powstawaniu rys na obudowie szafki.

Koła hamulcowe zamontować po tej samej stronie co zamek szafki. Mechanizmy hamulcowe powinny znajdować się na zewnątrz, tak jak na rysunku. Koła nieobrotowe należy zamontować po stronie przeciwnej.

Pod łby śrub podłożyć podkładki. Śruby dokręcać naprzemiennie po przekątnej płytki mocującej. Można zastosować dostarczony klucz lub użyć własnych narzędzi.

Postawić szafkę na kołach i przykręcić uchwyt szafki.

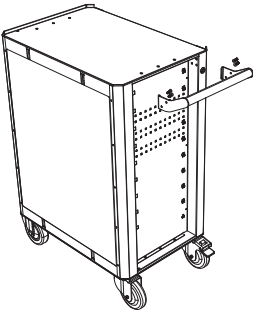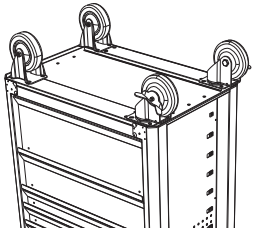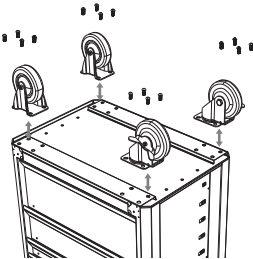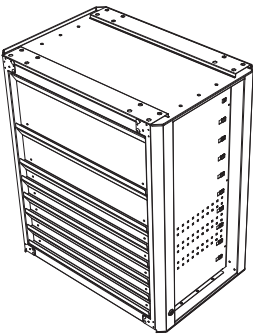

ASSEMBLY INSTRUCTIONS

Turn over the cabinet, lay down it to a soft surface, such as carpeting or a piece of cardboard, to protect it from scratches.

Place the brake wheels on the same side of the keyhole and the fixed wheels on the opposite. Two brake devices should be outward the cabinet, as shown.

Insert a washer before mounting the screws, tighten screws in diagonal manner not in circle direction. You may use our hex key to do this or use your own proper tools.

Turn over the cabinet, set up the metal handle with screws.

